


Assembly instructions bathroom furniture Washbasin / mirror / wall cabinet

(07v22) eng

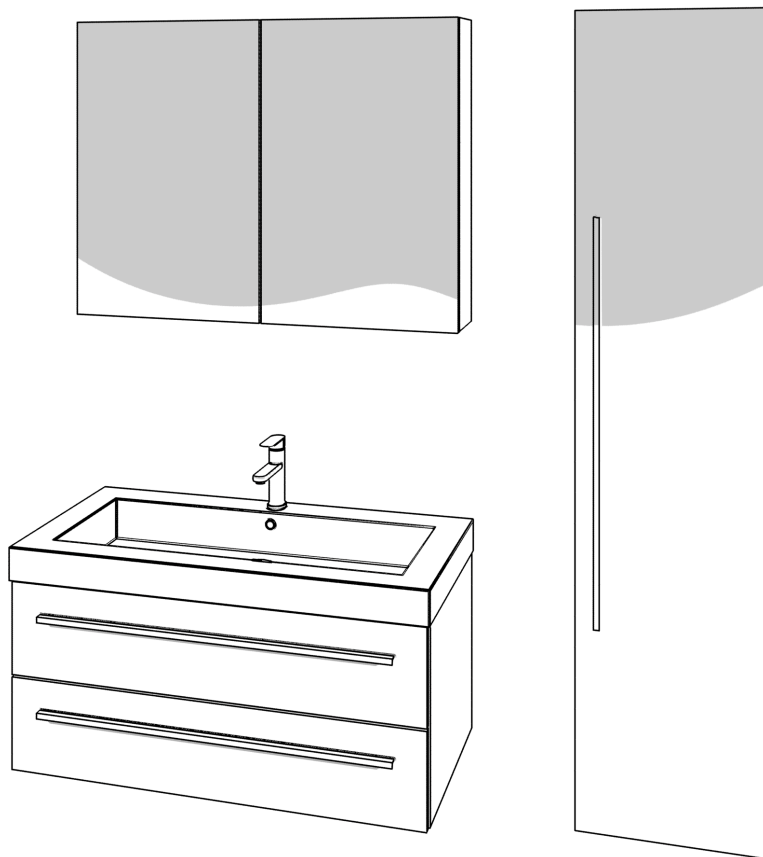

Attention: The assembly of the bathroom furniture should be done by two people!



Foreword

Thank you for choosing our bathroom furniture. Before unpacking the cabinets, check the packaging for any damage! Later complaints will not be accepted. Before assembly, also check all parts for damage and for completeness. In case of problems, contact the seller or us promptly! Please read these instructions carefully before you start assembling.


This furniture, was designed in design and functionality for private use. Our products are subject to constant further development. This may result in changes to the design and the use of other components. We try to stay up to date on the following pages. If you have any questions regarding the design, please contact us at +49 35795 - 179 600 or send an e-mail to kundenservice@seniorbad.de. We are very grateful for any suggestions for improvement.

General information

Please note that your bathroom furniture should be installed at a minimum distance of 50 cm from bathtubs and showers.


Wall mounting washbasin

The wall bracket is already pre-assembled on the washbasin cabinet. Measure the distance between the two brackets from centre to centre. This measurement is the distance between the two wall brackets, which you must screw to the wall in your bathroom using the screws and dowels provided. Then the washbasin can be hung in the wall bracket (see drawing below). With the help of the two set screws on the opposite side of the suspension hooks, the washbasin can be adjusted precisely so that it hangs horizontally and flush against the wall.

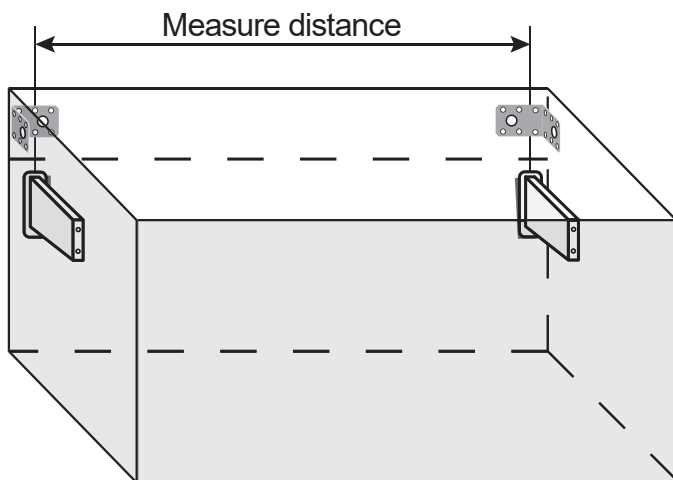

The top edge of the washbasin should be between 85 and 95 cm above the floor. As a guide, you can also halve your own twill size.

The washbasin has a surrounding edge on its underside. This rests on the edges of the washbasin on the right, left and back. At the front, however, the washbasin overhangs.

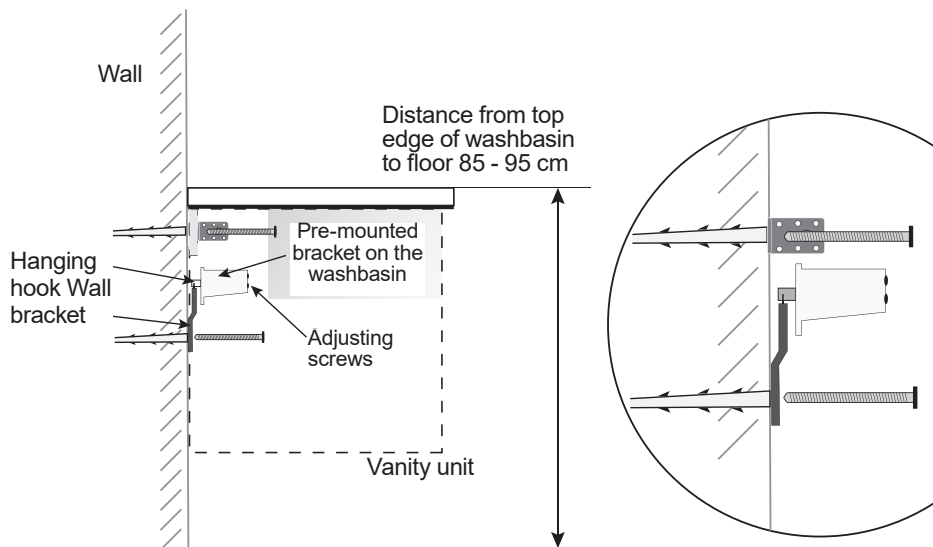

Finally, screw the pre-assembled brackets (photo) to the wall.



Washbasin with worktop

To connect the worktop to the washbasin, first mount the enclosed brackets on the vanity unit as shown in the photo.



Now place the worktop on the vanity unit and screw it to the brackets. Finally, slide the cover caps onto the brackets.




When assembling, please note that the washbasin must be sealed with a silicone joint at the worktop.

Wall-mounted mirror

ATTENTION!


Do not screw the mirror doors of the cabinet to the carcass until the cabinet is completely aligned on the wall.

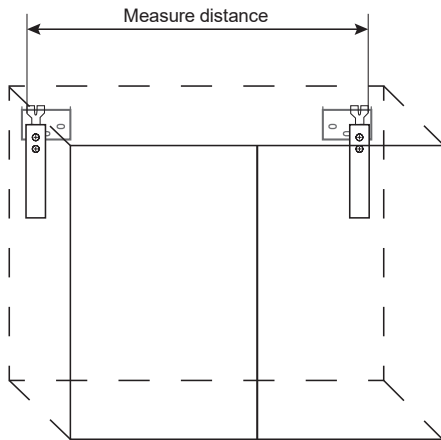

Before wall-mounting the mirror, determine the height at which the wardrobe is to hang. The distance between the top edge and the floor is usually between 190 and 220 cm.

The wall bracket is already pre-mounted on the mirror. Measure the outer distance between the two brackets. This measurement, plus approx. 1 cm, is the outer distance between the two wall brackets, which you must fix to the wall in your bathroom using the screws and dowels provided.




Then the mirror can be hung in the wall bracket. With the help of the two adjusting screws, which you can reach through the hole in the back wall, the mirror can be adjusted precisely so that it hangs horizontally and flush on the wall. Finally, the enclosed cover caps are placed on the open holes.

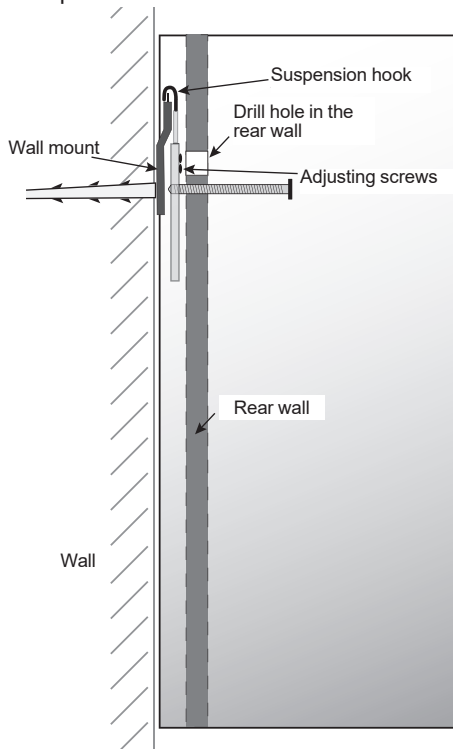

Wall-mounted wall cabinet

The wall bracket is already pre-assembled on the cabinet. You can change the door stop. In this case, unscrew the wall bracket and mount it turned by 180 degrees at the lower end on the pre-drilled holes (picture on the right). If you now turn the wall unit upside down, the door opens to the other side.

Measure the outer distance between the two brackets. This measurement, plus approx. 1 cm, is the outer distance of the two wall brackets, which you have to fix to the wall in your bathroom with the enclosed screws and dowels.

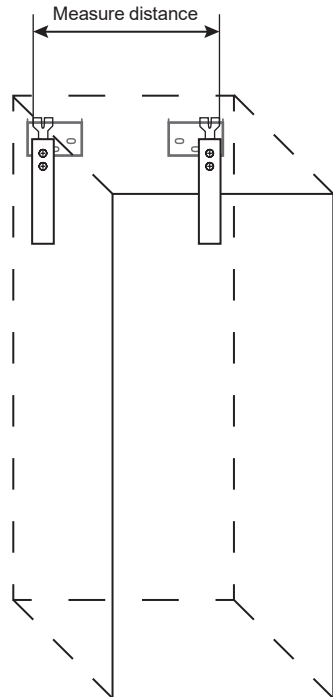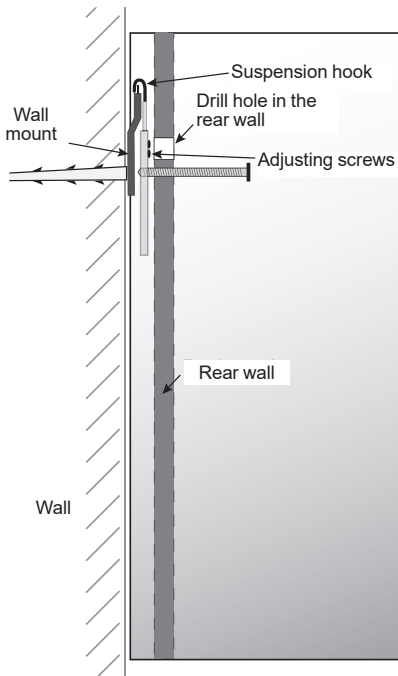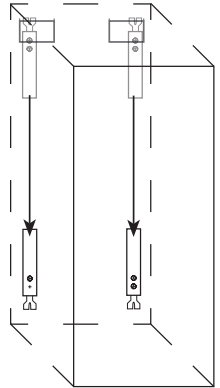

Then the cabinet can be hung in the wall bracket. With the help of the two set screws, which you can reach through the hole in the back wall, the cabinet can be adjusted precisely so that it hangs horizontally and flush against the wall. Finally, the enclosed cover caps are placed on the open holes.



Adjusting the sliders horizontally

The basic prerequisite for trouble-free adjustment of the sliders is that the cabinet section is suspended horizontally. It is essential to check with the help of a spirit level whether your cabinet is hanging horizontally.

There is a rail on the underside of the slider for opening and closing it.




On this rail there is an adjusting screw and a safety lever.

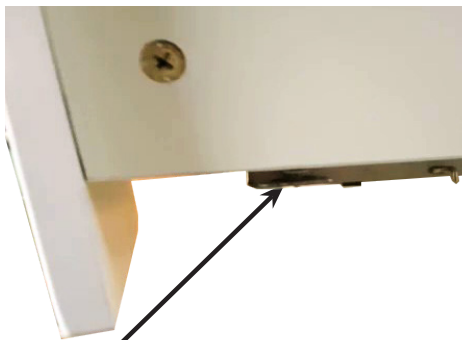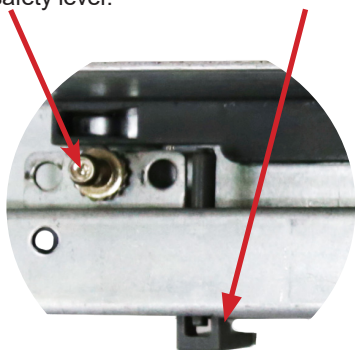

Rail on the underside of the slider

Open the safety levers on both sides by pushing them inwards.

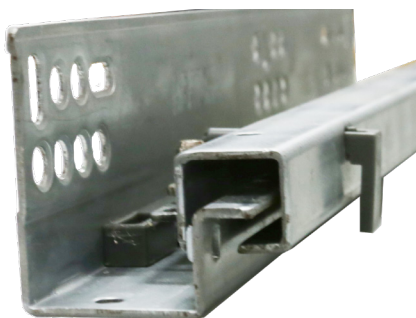


Closed safety lever



Open safety catch

Now you can lift out the slider completely. In the next step, screw the two set screws all the way down.

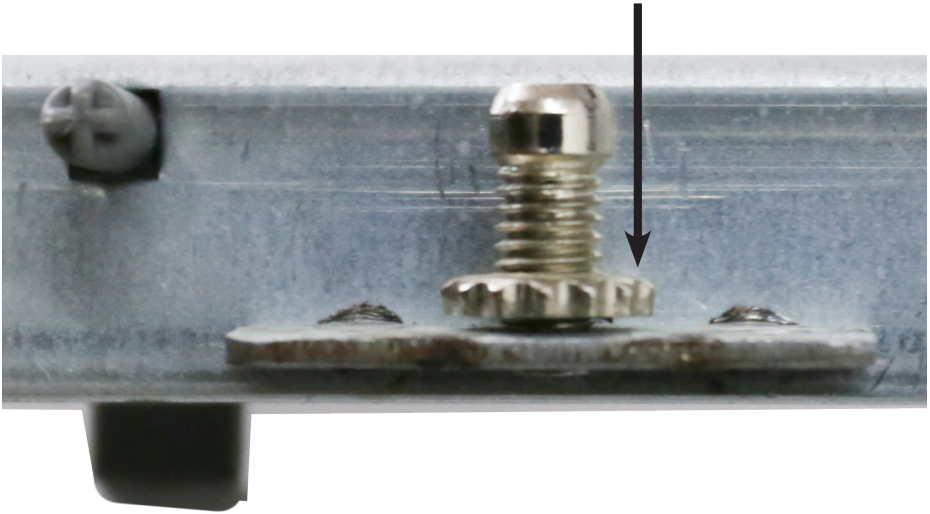

Now you can hook the slider back in. Leave the safety levers open and lift the slider slightly. Use the set screws to straighten the slider.

Finally, close the locking levers again and check once more whether the slider is now aligned horizontally. If this is not the case, open the locking levers again and correct with the help of the adjusting screws.